

TECHNOLOGY CLASSROOM OPERATION INSTRUCTIONS: FA-307

COMPUTER DISPLAY



- Power up the “Instructor’s” PC. Log In as “Guest” (no password needed)
- Turn ON the LCD Projector See **LCD PROJECTOR** Section
- Press the “**INPUT 1**” button on the projector remote for computer or DVD display
- See **AUDIO** section for audio playback from the computer



EXTERNAL PC (Laptop) DISPLAY See instructions on the switchbox, located on the desk

ELMO VISUAL PRESENTER DISPLAY



- Turn Presenter ON. Switch is located at left , rear of unit
- Turn ON the LCD Projector See **LCD PROJECTOR** Section
- Select “**PRESENTER**” on video switcher located on desk
- Press the “**INPUT 3**” button on the projector
- Adjust size, focus light source using the Presenter’s front panel buttons



DVD/VHS VCR VIDEO DISPLAY

- Turn ON the VCR and the LCD Projector See **LCD PROJECTOR** Section
- Select “**VCR/DVD**” on video switcher located on desk
- Press the “**INPUT 3**” button on the projector remote
- Select VCR/DVD button on the units control panel.
- Turn on VCR/DVD using “ON/STANDBY” button on left front panel of the VCR/DVD unit.
- Press the “VCR/DVD SELECT” button on the front of the unit to choose between VHS tape or DVD.
- Basic VCR/DVD functions are accessed on the front of the unit. Complete functions and controls for scan, chapter functions, etc are available via the attached remote.
- Use Channel up down buttons to view cable TV. Tune to channel “L” to turn off the cable.
- Turn ON Audio Amplifier and select “**VIDEO**” input (See **AUDIO** Section)

LCD PROJECTOR



- Turn on the LCD Projector by pressing the “ON” button located at the top, right side of the remote control and aiming at the projector or screen. Note that the lamp may take two or three minutes to become bright.

AUDIO



- Turn on the Amplifier. Power button located on top left
- Select the appropriate source, COMPUTER or VIDEO (labeled on the amplifier)
- Adjust volume.
- Check that “SPEAKER A” is ON
- Be sure that the “EQ” switch is NOT ON (“ON” is indicated by a green, illuminated button)



IMPORTANT: PLEASE turn off the projector when finished, by pressing the OFF button twice. This will increase the life of the lamp. (Lamp replacement cost is \$450.)



If you have any questions or would like a demonstration, call in advance, the OIT Help Desk at x 3000